



# **COOKER HOOD**

INSTRUCTION MANUAL  
BCIAISB53


# User Instruction

Note: Please read the instructions before installation.


- ✧ Your cooker hood is for domestic use only, not suitable for barbecue and other commercial use.
- ✧ Any installation work must be carried out by a qualified electrician or qualified installer.
- ✧ The cooker hood and the aluminium filters should be cleaned regularly to maintain in good working condition.
- ✧ Before cleaning, always ensure that you have switched off your cooker hood.
- ✧ Clean the cooker hood as shown in the instruction manual.
- ✧ Do not dry your cooker hood over fire.
- ✧ If there is any fault with your cooker hood, please call the service department appointed by agent for servicing.

## Installation

1. The ceiling must can bear at least 120kgs weight, and the thickness of the ceiling must be  $\geq 30\text{MM}$ , drill 1\*170mm round hole in the ceiling.
2. According to the hanging board, drill 12 holes in the ceiling, see pic 2, 12pcs of ST6\*40mm big flat screws will be used to fix the hanging board on the ceiling, and then 8pcs of M4\*10 screws and M4 nut with gasket will be used to connect the angle iron into the hanging board, see pic 1, calculated the length of the angle iron, and 16pcs M4\*10 big flat screws and M4 nut with gasket will be used to connect the angle iron and another angle iron ( the overlap length of angle iron can not less 100MM)
3. Let the one side of the extensible pipe go outside through the hole of 170MM, see pic 3.

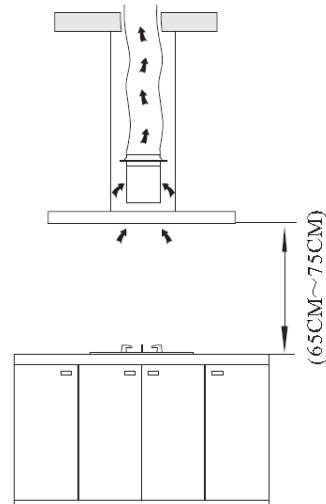


4. 4pcs ST4\*8 big flat screws will be used to connect the internal chimney into the hanging board, then put one the external chimney, two hooks will

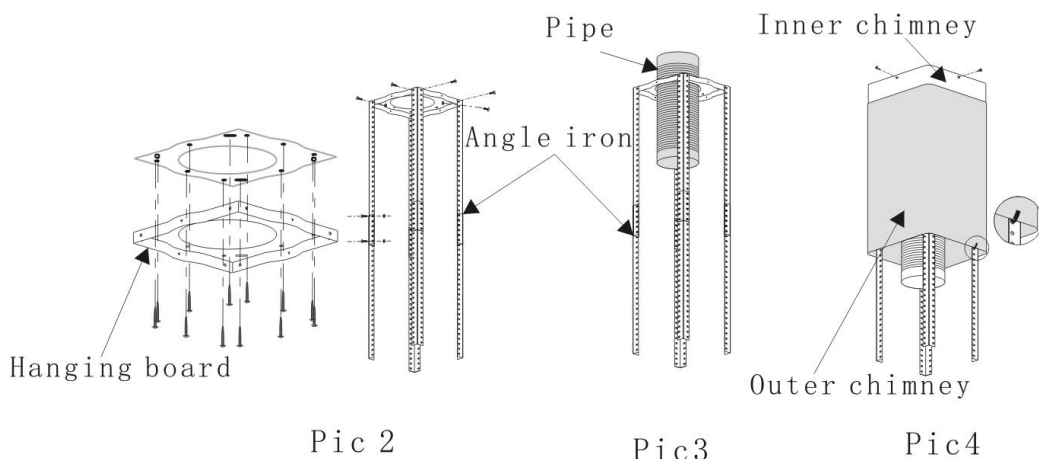

be used to put up the external chimney in order to the next installation, see pic 4.


5. Hold up the hood, 16pcs M4\*10 big flat screws will be used to connect the hood body into angle iron, see pic 6.

6. Put the extensible pipe on the outlet; after ensure all the things ok, put down the hook, take from the external chimney, all the installation is finished, see pic7& 8.

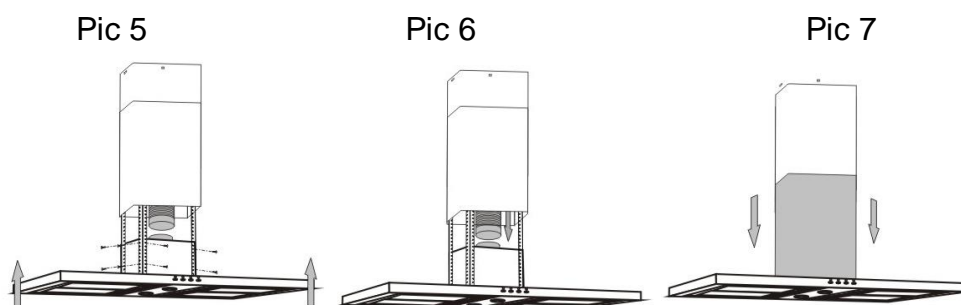

## NOTICE OF INSTALLATION

1. Before installation, please ensure the area is clean to avoid suction of the remaining bits of broken wood and dust.
2. It cannot share the same air ventilation tube with other appliance such as gas tube, warmer tube, and hot wind tube.
3. The bending of ventilation tube should be  $\leq 120^\circ$ , parallel or above the start point and should be connected to the external wall.
4. After installation, make sure that the extractor is level to avoid grease collection at one end.

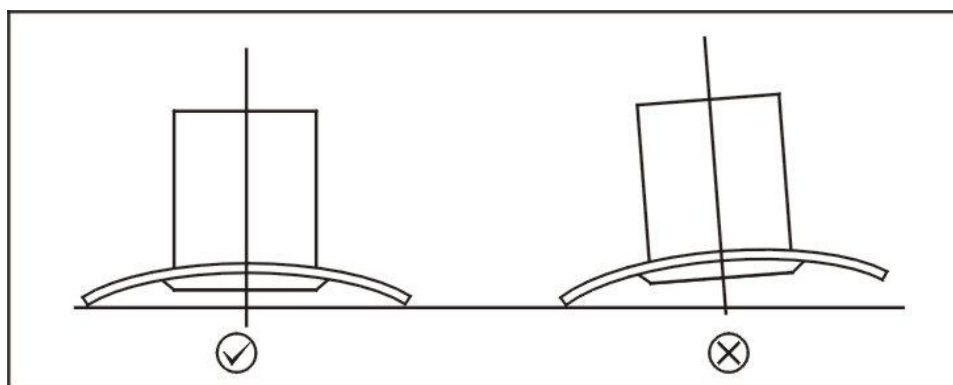


## SAFETY WARNING

- Never let the children operate the machine
- The cooker hood is for home use only, not suitable for barbecue, Roast shop and other commercial purpose.
- Please ask the technical person to do the assembling.





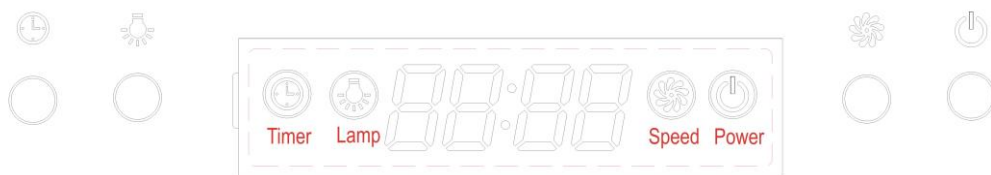









- The cooker hood and its filter mesh should be clean regularly in order to keep in good working order.
- Before cleaning, please switch the power off at the main supply.
- Clean the cooker hood according to the instruction manual and keep the cooker hood from the danger of burning.
- If there is any fault with the appliance, please call the service department to arrange a service engineer.






 

























Speed adjustment .See pictures



## LCD Electronic button

Pic 10

1. Plug the hood; LCD will display 24-hour system with blue backlight. Backlight will be extinguished after 30 seconds without any operation.
2. Press  button once; lights will be on and LCD will show "Lamp". Press  button again; lights will be off and "Lamp" on LCD will disappear.
3. Press  button once; the hood works at LOW speed and LCD will show "Speed" and  button will be on. Press  button again; the hood works at MEDIUM speed. Press  button one more time; the hood works at HIGH speed. Press  button again; the hood works at LOW speed again and it repeat. While pressing  button; the  button is always on. If you want to stop the hood now; press the  button once.
4. When the hood is not working; press  button once. The hood will work  at the speed it works last time and LCD will show "Speed". Press  button  again; the hood stop working and "Speed" will disappear from LCD.

5. When both “” button and “” button don’t work; “” button is used for time-setting. Press “” button for 2 to 3 seconds;  will be shown on LCD and  flashes; which represents hour. Press “” button once the number adds by 01. Continue pressing “” button; it will display from 13;14... until 23. When LCD shows 23; it doesn’t work by pressing “” button. Press “” button once; the number reduces by 01. When LCD shows 00; it doesn’t work by pressing “” button. After setting hour; you can start setting minute by pressing “” button again.  on LCD flashes; which represents minutes. Press “” button once the number adds by 01. Continue pressing “” button; it will display from 01;02... until 59. When LCD shows 59; it doesn’t work by pressing “” button. Press “” button once; the number reduces by 01. When LCD shows 00; it doesn’t work by pressing “” button. After setting hour and minute; press “” to confirm.
- When “” button doesn’t work; “” button is used for delay timer function. Delay timer function allows you to set the hoods automatically power off according to the delay timer you set from 1 minute to 60 minutes. Press “” button once; it enters for delay timer setting and LCD shows . Press “” button once the number adds by 01.
- Continue pressing “” button; it will display from ; ;  ... until  Press “” button once; the number reduces by 01. After setting delay timer you want; press “” button to confirm. If you set delay timer as 05:00; the LCD display will show from 05:00; 04:59... until 00:01 00:00. When LCD shows 00:00; the hood will automatically power off and LCD display will only show 24-hour system with blue backlight. After 30 seconds without operation; blue backlight will disappear. But please note the Lamp is not under control of delay timer. Next time; if you want to use delay timer function and you

press “🕒” button without any change on time. The hood will automatically count time down from your previous setting after 5 seconds.


## MAINTENANCE

The cleaning of the carbon grease filter mesh

The filter mesh is made of high-density stainless steel. Please do not use the corrosive detergent on it. Keeping this filter clean will keep the appliance running correctly. Please strictly follow the guidelines below.

Method 1: Put the mesh into 40-50 c clean water, pour on detergent, and soak for 2-3 mins. Wear gloves and clean with a soft brush. Please do not apply too much pressure, as the mesh is delicate and will damage easy.

Method 2: If instructed to do so, it can be put into a dishwasher, set the temperature at around 60 degrees.

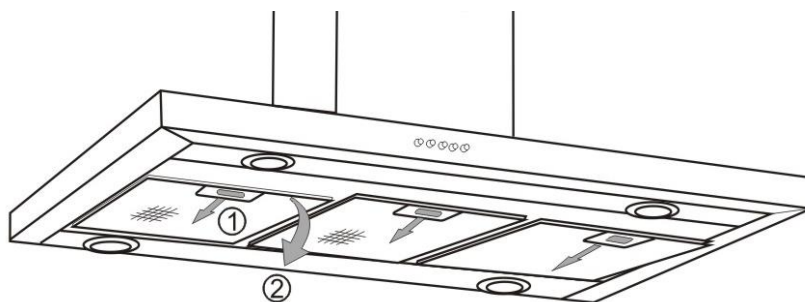

### Notice of cleaning cooker hood

- A.** To protect the main body from corrosion over a long period of time, the cooker hood should be cleaned with hot water plus non corrosive detergent every two months.
- B.** Please do not use abrasive detergent for it will damage the body.

- C.** Keep the motor and other spare parts free from water, as this will cause damage to the appliance.
- D.** Before cleaning the appliance please remember to cut off power
- E.** The carbon filter shouldn't be exposed to heat.
- F.** Please don't tear open the fixed bar around the carbon filter
- G.** If the plug or cord is damaged, please replace it with special soft cord.